

3M™ Acrylic Foam Tape Series GT6000

Technical Data Sheet



Product Description

3M™ Acrylic Foam Tape Series GT6000 demonstrates a good adhesion to many automotive surfaces, good inner strength, excellent long term stability and very good adaptability to the bonded areas.

Typical applications are attachments of exterior add-on-parts such as body side moldings, trims or emblems/inserts.


Based the unique viscoelastic property of GT6000, stress is relaxed in the adhesive bond line so that durable bonds are formed.

Product Features

- Good adhesion to many automotive paints.
- Operating temperature up to 120°C.
- Optimized acrylate foam core for easy application and good adaptation to component surfaces.
- Temperature, weather, UV and solvent resistant.
- Suitable for all manual and automatic application processes.

Advantages

- 3M [™] Acrylic Foam Adhesive Tapes can compensate stress due to their unique viscoelasticity. In contrast to foam adhesive tapes (PE, PU adhesive tapes), they can cope with significant elongation differences between substrates in case of temperature changes.
- Easy to use: The tape can be easily processed in multiple ways to cut and to apply.
- Good initial adhesion: The initial adhesion allows immediate further processing often without temporary support or fixtures.
- Freedom of design: enables the easy differentiation of vehicle models through modified trim attachments without change of the body configuration.
- Sealing and damping properties: positive improvement of NVH properties.

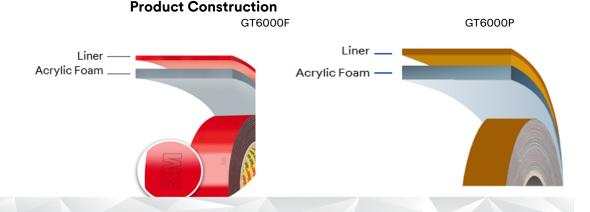

Physical Properties

Typical Values	GT6006	GT6008	GT6012
Thickness	0.6 mm	0.8 mm	1.2 mm
90° Peel on 3M Reference Stainless Ste	el plates (Specificatio	n values have to be determined	on customer substrate)
20 min RT Liner Side (LS)	19 N/cm	22 N/cm	29 N/cm
72 h RT Liner Side (LS)	20 N/cm	23 N/cm	29 N/cm
Density	700 kg/m³		
Core	3M™ Acrylic Foam Tape		
Color	Gray		
Liner	F: Red polyethylene foil.		
	P: Brown paper liner for die cuts; not suitable for lathe slitting.		
Adhesive Liner Side (LS) and Non-Liner Side (NLS)	Self-stick, good initial and final adhesion on various paint systems and surfaces.		
Shelf Life	24 months (film liner) and 12 months (paper liner) from date of receipt by customer when stored in unopened original carton at 4°C to 38°C and 0% to 95% relative humidity. Optimum storage conditions are 22°C and 50% relative humidity. Level-wound rolls should always be stored horizontally.		
Temperature Resistance	-40°C to +120°C, short term 160°C (both values are load dependent).		
Tabbing	An extended liner tab is recommended. F: 3M™ PSA Tabbing 5300 or 3M™ Heat-bonding tabbing 5081 - 5082. P: An extended liner tab is recommended.		
Splices	Number of splices depends on order quantity and roll length. Level-wound rolls have 3-4 splices on average. Smaller order quantities (less than 400 m²) rolls could contain a significantly different number of splices.		
Regulatory Information	Please refere to the product label and Safety Data Sheet (SDS) for health and safety information before using. Observe proper handling precautions as outlined in the SDS, which is available on request or use www.3M.com/msds. The product is published as material entry and is available for access on www.mdsystem.com. For Product IMDS ID Number, email requests to 3M-IMDSrequest@mmm.com. (In Germany use ge-produktsicherheit@mmm.com).		
IMDS	http://www.mdsystem.com/imdsnt/startpage/index.jsp		

Technical Information: The technical information, recommendations and other statements contained in this document are based upon tests or experience that 3M believes are reliable, but the accuracy or completeness of such information is not guaranteed and not for use in specifications.

Product Use: Many factors beyond 3M's control and uniquely within user's knowledge and control can affect the use and performance of a 3M product in a particular application. Given the variety of factors that can affect the use and performance of a 3M product, user is solely responsible for evaluating the 3M product and determining whether it is fit for a particular purpose and suitable for user's method of application.

Warranty, Limited Remedy, and Disclaimer: This 3M product is sold or made available "AS IS." 3M MAKES NO OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR ANY IMPLIED WARRANTY OR CONDITION ARISING OUT OF A COURSE OF DEALING, CUSTOM OR USAGE OF TRADE. Limitation of Liability: Except where prohibited by law, 3M will not be liable for any loss or damage arising from the 3M product, whether direct, indirect, special, incidental or consequential, regardless of the legal theory asserted, including warranty, contract, negligence or strict liability.



3M Deutschland GmbH Automotive & Aerospace Solution Division Carl-Schurz-Strasse-1 D-41453 Neuss Tel. +49-2131-14-3580 www.3M-Automotive.de 3M Österreich GmbH Automotive & Aerospace Solution Division Kranichberggasse 4 1120 Wien Tel: +43-1-86 686-0

© 3M 2018 All Rights Reserved

GT6000 Series E_02 (09/2018)

Revision 02

3M (Schweiz) GmbH Automotive & Aerospace Solution Division Eggstrasse 93 8803 Rüschlikon Tel: +41 44 724 90 90

Supersedes former versions.